



Jacobs Parts Manual for 750 Series—2013 Update

INCLUDES

- Parts list for Detroit Diesel 750 Series
- Updated part numbers as of January 2013
- Part numbers for housing assemblies and attaching parts group
- Part name, part number and illustration number for each model

Housing Assemblies

Model	Description	Part Number
750 / 750A	Housing Assy, 12VDC, S/L,Pkgd	25242
750 / 750A	Housing Assy, 24VDC, S/L,Pkgd	25287
750B	Housing Assy, 12VDC, S/L,Pkgd	26559
750B	Housing Assy, 24VDC, S/L,Pkgd	26560

Attaching Parts Group

		Model	750 / 750A / 750B
Illustration #	Part Name	Qty/Hsg	Part Number
Hsg. Attg. Parts Grp, P/N 19079 Superseded by 21269			
1	Bolt -12pt. 4.375" (110mm)	6	21183
2	Flat Washer	6	21184
3	Spacer Bar	1	19258

		Model	750	750A	750B
Illustration #	Part Name	Qty/Hsg	Part Number	Part Number	Part Number
8	Upper Seal Ring	1	20229	20229	20229
9	Center Seal Ring	1	1082	1082	1082
10	Lower Seal Ring	1	1083	1083	1083
15	Screw	2	1492	1492	1492
3	CV-Outer Spring	2	1519	1519	1519
25	Pipe Plug	11	28317	28317	28317
14	Hex Nut	2	11395 (1/2")	11395	19987 (5/8")
18	Bridge Adj. Screw	2	11426	11426	11426
6	Control Valve	2	11930	11930	11930
12	Accumulator piston	1	12983	12983	12983
11	Accumulator Spring (3.260" OAL)	1	12990	12990	12990
1	Retaining Ring	3	12991	12991	12991
7	Solenoid Valve 12V, single lead	1	1024612	1024612	1024612
7	Solenoid Valve 24V, single lead	1	1024619	1024619	1024619
2	Washer	5	16505	16505	16505
5	Collar	2	16557	16557	16557
19	Hex Nut	2	16766	16766	16766
21	Bridge	2	16771	16771	16771
20	Slave Piston 1.125" dia	2	17048	17048	24338
17	Master Piston 0.936" dia	2	17565	17565	17565
16	MP- Flat Spring	2	17658	17658	17658
4	CV- Inner Spring	2	18179	18179	18179
22	Torsion Spring	2	19576	19576	19576
23	Button Head Screw	2	19740	19740	19740
24	Washer	2	19741	19741	19741
13	Power Lash Assy (.068-082")	2	20382	20382	-
13	J-Lash Assy (.023")	2	-	-	28082